



Seat Height Adjustment — Enables the seat to adjust to the preferred height.

To raise the seat, lift your weight off the seat and pull up on the lever; release lever when seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

Tilt Tension Adjustment — Increases or decreases the amount of effort needed to recline in the chair.

Turn the knob counterclockwise to decrease the amount of tension required to tilt the chair back.

Turn the knob clockwise to increase the amount of tension required to tilt the chair back.

Seat Angle Adjustment — Allows user to independently position and lock the seat angle relative to the floor.

Push the lever down to unlock and free float.

Adjust to preferred angle and pull the lever up to lock into position.

Forward Tilt Adjustment — To utilize, the Seat Angle Adjustment lever must be in the down (free float) position.

To obtain a forward seat angle, lean back slightly and rotate right front lever clockwise.

To obtain a neutral seat angle, lean back slightly and rotate right front lever counterclockwise.

Back Angle Adjustment — Adjusts the angle of the back relative to the seat.

To adjust, lift lever up and adjust the back to the preferred position.

Release lever to lock into place.

Seat Glide Adjustment — The depth of your seat adjusts to accommodate different leg lengths.

To change the seat depth, lift and hold the lever as you push the seat forward or backward.

Release the lever to lock seat in place.

Back Height Adjustment — Provides custom lumbar support.

From a seated or standing position, lift up on the back to adjust the back height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

Arm Height Adjustment — Enables the user to adjust the arms based on body size, task, and personal preference.

Lift up on lever, and adjust arm height to desired position.

Release lever to lock arm into place.

Arm Width Adjustment — Enables the user to adjust the arms based on body size, task, and personal preference.

Turn knob counterclockwise to loosen.

Adjust arm in or out to desired width.

Turn knob clockwise to tighten.