

Allsteel®

Designed to work. Built to last.

SEATING

Trooper Mid-Range Control



Seat Height Adjustment — Enables the seat to adjust to the preferred height.

To raise the seat, lift your weight off the seat and pull up on the lever; release lever when seat reaches desired height.

To lower the seat, lift up on the lever while you are seated; release lever when seat reaches desired height.

Tilt Lock — Locks the chair in an upright position for full task support.

Push the lever in while the seat and back are upright to lock into upright work position.

Pull lever out to unlock and free float.

Tilt Tension Adjustment — Increases or decreases the amount of effort needed to recline in the chair.

Turn the knob counterclockwise to decrease the amount of tension required to tilt the chair back.

Turn the knob clockwise to increase the amount of tension required to tilt the chair back.

Back Height Adjustment — Provides custom lumbar support.

From a seated or standing position, lift up on the back to adjust the back height to one of five preset positions.

Lift the back to its maximum height in order to release the internal back height mechanism and return the back to the lowest position.

Arm Height Adjustment — Enables arms to adjust to your body size and personal preference.

Lift up on lever, and adjust arm height to desired position.

Release lever to lock arm into place.

Arm Width Adjustment — Enables arms to adjust to your body size and personal preference.

Turn knob counterclockwise to loosen.

Adjust arm in or out to desired width.

Turn knob clockwise to tighten.